
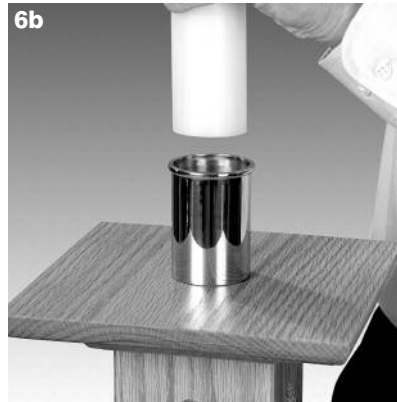


# ASSEMBLY & CARE INSTRUCTIONS

## Almy Wood Paschal/Plant Stand

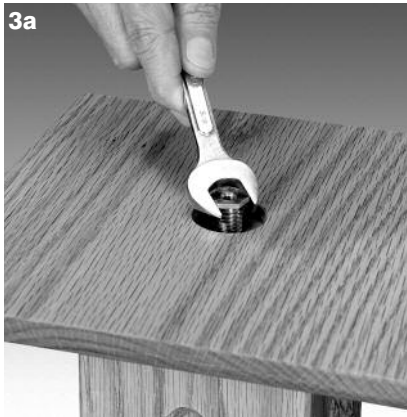

### STANDARD PARTS

- Shaft, 4" x 4", 40%, with connecting fasteners
- 3-Step Base, 12" x 12", with feet at corners
- Top, 8" x 8"

### OPTIONAL PARTS

- Brass Candle Socket
- Advent Candelabrum Top & Sockets  
(with Assembly Instructions)
- Advent Wreath Holder

### ASSEMBLY

#### 1 Attach 3-Step Base to Bottom of Shaft

- Place shaft topside down on mouse pad enclosed
- Remove nut and washer from bolt at bottom of shaft
- Place 3-Step Base onto bolt and rotate so that base fits on alignment pin at bottom of shaft
- Place washer, then nut, onto bolt
- Tighten nut with  $\frac{1}{2}$ " socket or crescent wrench

#### 2 Attach Top to Shaft

- Place stand on its base
- Remove washer and threaded stud fastenings from screw on top of shaft
- Place Top (with 8" x 8" surface up and chamfered edges down) onto screw and rotate so that top fits on alignment pin on top of shaft
- Place washer on screw to secure Top

#### 3 To make Plant Stand Top

- Screw the Threaded Stud fastener onto the screw with hex end up and the threaded section down, using a  $\frac{1}{4}$ " socket to tighten
- Place closure piece into the hole above the threaded stud

#### 4 To make Paschal Candle Top

- Screw the Threaded Stud fastener onto the screw with the hex end down and the threaded section up, using a  $\frac{1}{4}$ " socket to tighten

#### 5 Optional, Candle Socket

- If you ordered an optional candle socket, screw it onto the Threaded Stud
- Use gloves or take care to wipe finger prints from the brass socket after installation

#### 6 Install Candle

- Almy Liquid Paschal Candles can be secured to the stand by screwing them directly onto the Threaded Stud  
*OR*
- Liquid Paschal Candles or Wax Paschal Candles can be inserted into the optional brass socket

### Care

Wash twice a year or as needed with warm water and mild dish soap. Rinse and dry immediately.



**CM ALMY**  
800.225.2569 [www.almy.com](http://www.almy.com)



AIK305-1

AS305-1